


# How to use your digital camera...

Quick reference – Project E-Teach – Sony MVC-FD73 – Digital Mavica

---



## Recording images

1. Slide POWER down to turn on the power, take off lens cap
2. Insert the floppy disk, with the top facing the back of the camera (you should not have to force it into the drive) until it clicks.
3. Set PLAY/CAMERA to CAMERA.
3. Press the shutter button halfway down. The AE lock indicator  (green) appears. AE (auto exposure), AWB (auto white balance) and AF (auto focus) are frozen.
4. Press the shutter button fully down. The image is recorded on the disk.

### Notes:

- About 25-40 images with all default settings will record on a floppy disk
- When the image is recorded on the disk, the ACCESS lamp flashes.
- When the ACCESS lamp is flashing, never shake or strike the unit. As well do not turn the power off or remove the battery pack or floppy disk. Otherwise, the image data breakdown may occur and the floppy disk may become unusable.

## Playing back images on the LCD screen

1. Slide POWER down to turn on the power, take off lens cap
2. Insert the floppy disk, with the top facing the back of the camera (you should not have to force it into the drive) until it clicks.
3. Set PLAY/CAMERA to PLAY. The last recorded image appears on the LCD screen.
4. Select the recorded image with the control button. Select the button on the LCD screen with the control button, and then press it.

### Notes:

- Use arrows to display the preceding and next images
- Use INDEX button to display 6 recorded images at a time
- To return to the normal playback screen (SINGLE screen), select an image with the control button, and then press it.

- The number displayed at the upper right side of the image shows the recording order on the disk. It is different from the file name.

### **Viewing images using a personal computer**

The image data recorded with this camera is compressed in JPEG format. This data can be viewed using a personal computer which has JPEG view ability application installed such as Microsoft Internet Explorer.

1. Start up personal computer and insert the floppy disk into the disk drive of the personal computer.
2. Open “My computer” and double click “3.5 inch FD”.
3. Double-click the desired data file.

#### Notes:

- For Macintosh, you can use the floppy disk recorded with this camera using the PC exchange with Mac OS system 7.5 or higher. A viewing application for Macintosh is also necessary for viewing images.
- Opening non-compressed images recorded in BITMAP mode requires an application program designed to view bitmapped images.